

# Desktop Neon Clock

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Desktop Neon Clock is an attractive and useful addition to your home or office. Its neon light lets you easily see the time in the dark.

**WARNING:** To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

## INSTALLING A BATTERY

Your clock requires one AA battery (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

**Caution:** Use only a fresh battery of the required size and recommended type.

1. Press the battery compartment cover's tab to the right, then lift off the cover.
2. Place the battery in the compartment according to the polarity symbols marked inside, positive (+) side first, then push it down to snap it into the compartment.
3. Replace the cover.

When the clock stops operating properly, replace the battery.


**Warning:** Dispose of old batteries promptly and properly. Do not burn or bury them.

**Caution:** If you do not plan to use the clock for a month or longer, remove the battery. Batteries can leak chemicals that can destroy electronic parts.

## USING AC POWER

You can power the neon light using the supplied 9V, 200mA AC adapter.

1. Insert the adapter's barrel plug into the **DC 9V** jack on the back of the clock.
2. Plug the adapter's other end into a standard AC outlet.

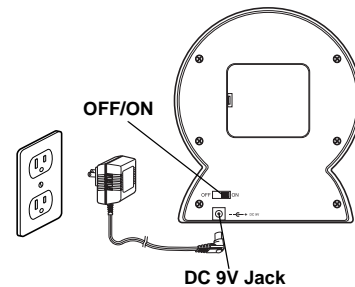

### Cautions:



You must use a Class 2 power source that supplies 9V DC and delivers at least 200 mA. Its center tip must be set to positive and its plug must fit the clock's **DC 9V** jack. The supplied adapter meets these specifications. Using an adapter that does not meet these specifications could damage the clock or the adapter.

- Always connect the AC adapter to the clock before you connect it to AC power. When you finish, disconnect the adapter from AC power before you disconnect it from the clock.

## SETTING THE TIME

1. Press the battery compartment cover's tab then lift off the cover.
2. Turn the clock adjustment knob inside the battery compartment counterclockwise or clockwise to set the current time.
3. Replace the cover.

## USING THE NEON LIGHT

To turn on the neon light, set **OFF/ON** on the back of the clock to **ON**. To turn off the neon light, set **OFF/ON** to **OFF**.

## CARE

Keep the clock dry; if it gets wet, wipe it dry immediately. Use and store the clock only in normal temperature environments. Handle the clock carefully; do not drop it. Keep the clock away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the clock's internal components can cause a malfunction and might invalidate its warranty. If your clock is not performing as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Clock Power Source .....	One AA Battery (Not Included)
Neon Light Power Source .....	AC Adapter 120VAC 60 Hz 4W/9V DC 200mA
Accuracy.....	± 1 Sec./Day
Battery Life (Continuous Using) .....	About 2 Years
Electronic Neon Tube Life .....	10,000 Hours (Continuous Use)
Dimensions.....	7 <sup>1</sup> / <sub>8</sub> × 6 <sup>3</sup> / <sub>8</sub> × 1 <sup>3</sup> / <sub>4</sub> Inches (182 × 160 × 45 mm)
Weight (Without Battery) .....	14.1 oz (0.4 kg)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99